

TRANSFORMERS BUMBLEBEE
骨传导耳机

使用说明书

货号: KB20070-1 品名: Bumblebee
货号: KB20070-2 品名: Optimus Prime
©2018 Hasbro & Paramount Pictures Corporation.



1 用户手册

Power 键: 打开/关闭耳机
音量-键: 降低音量
音量+键: 提高音量
多功能键: 暂停/播放音乐; 接听电话/结束通话; 双击切换下一首歌曲

2 耳机规格

扬声器	锂电池	频段
骨传导扬声器	3.7V/200mAh	20Hz—20KHz
播放时间	充电时间	无线范围
6 小时以上 (取决于音量)	2 小时	10 米 (33 英尺)

3 佩戴方式

1 手机 2 平板电脑 3 计算机
4 跑步 5 骑行 6 工作 7 开车

BT配对步骤

- 长按 Power 键3秒, 开启耳机。
- 耳机配对时, 请将耳机以及手机的距离控制在1米的范围内。
- 开机进入 配对模式, 红蓝灯交替闪烁。(如果没有出现, 请长按多功能键3秒进入配对模式。)
- 打开手机的 BT 功能, 搜索 BT 设备。选择 “KB_KLINE” 耳机, 如果需要输入配对码, 请输入 “0000”, 配对失败后重复上面的操作。
- 配对成功后, 蓝灯慢闪。

注意:

- 1、当与设备的连接距离超出BT的有效距离 (10米或33英尺) 时, 耳机将与设备断开连接。此后, 一旦它们再次处于 BT 有效距离范围内, 它们会自动重新连接, 但是, 如果 BT 耳机与所连设备断开超过3分钟, 您可能需要双击多功能键, 以重新连接设备。
- 2、如果耳机连接过设备, 那么再次打开时, BT 耳机会自动回到连到上一次的BT设备。
- 3、如果开机配对成功后, 长按多功能键3秒重新进入配对模式, 此时别的手机可以连接到此耳机。

多点连接一拖二功能

按配对步骤, 配对第一个手机后, 长按多功能键让耳机重新进入配对模式, 再配对第二个 BT 手机。
此时使用第一个手机BT设置界面再次连接刚才断开的KB_KLINE。

充电方式

用标准的 Micro USB 充电线 (随包装附送一条) 将耳机和你的个人电脑或 USB 充电器连接即可充电。大约2小时可以充满, 充电的时候 LED 指示灯为红色, 充电完成后变成蓝色。

注意:

- 1、由于电池在储存的过程中有可能损失电量, 建议在第一次使用前先给耳机充电。
- 2、在充电的过程中耳机是不可使用的。
- 3、长时间不使用, 建议每个月充电一次, 以保持电池寿命。
- 4、耳机在没有连接设备的情况下超过5分钟, 耳机自动关机。

LED 灯提示

红色快速闪烁: 电量不足
红色常亮: 正在充电
蓝色常亮: 完成充电
蓝色与红色交替闪烁: 配对模式
蓝色慢速闪烁: 已连接/正在拨打电话/正在播放音频
蓝色快速闪烁: 接到来电

产品配件图

规格参数

扬声器类型: 骨传导技术扬声器
待机时间: 长达10天 有效距离: 10米
播放时间: 6小时以上 (中等音量下测试数据, 音量变大, 时间缩短)
充电时间: ≤2小时

操作提示

操作	BT 耳机控制	提示音
开机	长按 power 键3秒	Power on
关机	长按 power 键3秒	Power off
接听电话	单击多功能键	无
结束呼叫	单击多功能键	无
拒接电话	长按多功能键 2 秒	无
音量控制	单击 “+” / “-” 键	无
暂停/播放音乐 (*)	单击多功能键	无
上/下首歌曲 (*)	长按 “+” / “-” 键2秒 或者双击多功能键下一曲	无
BT 已连接		Paired
BT 已断开		Dingdong
进入配对模式	长按多功能键	Ready to pair
电池电量低		dudu

*对不同类型的 BT 设备, 因为不同的操作系统或者音乐播放器, 此功能可能有所不同。

故障诊断及解决措施

问题	故障原因	解决措施
不能开机	检查电池是否充满电	给电池充满电
不能自动连接	BT 耳机是否进入待机模式	双击多功能键 或者重新开机
无法配对BT耳机	没有进入配对模式	长按多功能键3秒

存储与维护

- 请将 BT 耳机存放在阴凉、干燥的地方。工作温度-10~45℃ (14~113 ℋ) 。在冷/热环境或高度潮湿的地方工作会降低电池的寿命。
- 长时间存储后, 请在使用前先充电。
- 耳机防汗不防水。请勿将耳机放入水里。假如有水, 请使用干净的软布擦拭干净。
- 请使用柔软的干布清洁耳机。
- 请勿将任何尖锐物体接触耳机。
- 请勿将耳机置于温度极高或极低的环境下。
- 请勿在潮湿的环境下给耳机充电。

注意:

设计和规格如有变更, 恕不另行通知。

产品保修单

产品品牌: KLINE
产品型号: KLINE
用户姓名: _____
购买日期: _____
联系电话: _____
联系地址: _____
电子邮箱: _____
购买渠道: _____

保修条款

- 1、用户购机时, 随机附带有一本说明书及保修卡。用户填好后妥善保管, 作为保修凭证。
- 2、自购机之日起, 一年之内耳机在正常使用下出现问题, 持卡用户可免费享受保修服务。以下不属于保修范围:
A、保修卡无销售单位签字或盖章;
B、人为或不可抗拒因素造成损坏;
C、机器正常磨损;
3、若因人为、超过保修期及不可抗拒因素造成的故障, 我们将收取维修成本。
- 4、产品出现故障需要返厂保修时, 请联系我司, 并填好具体的姓名、地址、电话及故障现象。

制造商: 深圳市凯瑞斯互动娱乐有限公司
地址: 深圳市龙华新区大浪街道华宁路华联工业区15幢4层
电话: 0086-754-89822123
邮箱: sales@killerbodyrc.com
网址: hero.killerbody.com

TRANSFORMERS BUMBLEBEE
Wireless Bone Conduction Headphones

User Manual

Item No. KB20070-1 Product Name: Bumblebee
Item No. KB20070-2 Product Name: Optimus Prime
©2018 Hasbro & Paramount Pictures Corporation.



1 USER MANUAL

Power Button: power on(or power off) the headphones
Volume down Button: decrease the volume
Volume up Button: increase the volume
Multifunction Button: pause(or play) the music; answer(or end) the call; double click to switch to the next song

2 SPECIFICATIONS

Speaker Type	Li Battery	Frequency Range
Bone conduction speaker	3.7V/200mAh	20Hz—20KHz
Playback Time	Charging Time	Wireless Range
Up to 8 hours (Depending on volume etc)	About 2 hours	10 Meters(33 Feet)

3 WEARING WAY

1 Mobile Phone 2 Tablet 3 Computer
4 Running 5 Cycling 6 Working 7 Driving

Pairing Method

- Long press the power button for 3 seconds to power on the headphones.
- Please keep the headphones and the cellphone in the range of 1 meter if it's the first pairing.
- The red and blue lights flash alternately when entering the pairing mode after headphones power on. If it doesn't enter pairing mode, please press the multifunction button for 3 seconds until the red and blue lights flash alternately.
- Open the BT set on your cellphone or the devices with BT function. Then search the BT devices and choose pairing name “KB_KLINE”. Enter “0000” pin code if needed.
- The blue LED flash slowly when it's paired successfully.

Note:

1. When the distance between the headphones and the BT devices is far than 10 meters or 33 feet, the BT headphones will disconnect from the devices. After that, once they are in the range of 33 feet, they will automatically reconnect. However, if the headphones have disconnected for more than 3 minutes, you may need to double click the multifunction button to reconnect the devices.
2. If the headphones have paired, long press the multifunction button for 3 seconds and then the headphones reenter the pairing mode which other cellphones can find the BT headphones and connect it.

Connect Two Devices

- Following the pairing method, pair the first cellphone, long press the multifunction button until the BT headphones enter into pairing mode again, and then pair the second cellphone.
- Enter the cellphone setting interface of the first cell phone, and connect the device KB_KLINE again.

Charging Method

Using a Micro USB cable (attached to the package) to connect the headphones and the USB port of your PC or charging source, the headphones will be charged. It is in RED. After charging is complete, the LED indicator will turn to BLUE.

Note:

1. Because the battery may lose some power in the storage, it is kindly suggested to charge your headphones before using in the first time.
2. When charging, the headphones can not be used.
3. It is suggested to charge once a month to maintain battery life if the headphones are not used for a long time.

LED Indicator

Red LED flash quickly: low power
Keeping red LED light: charging
Keeping blue LED light: charging complete
Blue LED and red LED flashing alternately: pairing mode
Blue LED flashing slowly: connected/calling/playing music
Blue LED flashing quickly: incoming call
BlueLED double flashing slowly: the headphones doesn't connect the cellphone

Product Accessories

Specifications

Speaker type: Bone conduction technology speaker
Play time: Up to 6 hours (depending on the actual volume and the sound source)
Charging time: 2 hours
Standby time: Up to 10 days
Effective range: 10 meters (33 feet)

Basic Operation

Operation	Headset button controller	Warning tone
Power on	Long press power button for 3 seconds	Power on
Power off	Long press power button for 3 seconds	Power off
Answer a call	Click the multifunction button	No Buzzing
End a call	Click the multifunction button	No Buzzing
Reject a call	Long press the multifunction button for 2 seconds when call incoming	No Buzzing
Volume control	Click the vol“+”/“-” button	No Buzzing
Play or pause the music play (*)	Click the multifunction button	No Buzzing
The previous/next song(*)	Long press “+”/“-” button for 2 seconds or double click the multifunction button to switch to the next	No Buzzing
BT Paired		Paired
BT disconnected		Dingdong
Enter pairing mode	Long press the multifunction button	Ready to pair
Low battery		Dudu more times

*This feature may be different because of the different operation system and music player.

Fault Diagnosis and Solution

Fault	Possible reasons	Solution
Can not power on	Check whether the battery is low	Charging it
Can not automatic connection	Check if enters standby mode	Double click the multifunction button to reconnect or reboot the headphones
Can not discover BT headphones	Not enter pairing mode	Long press multifunction button for 3 seconds

Storage & Maintenance

- Please store the BT headphones in a cool and dry place. The working temperature is -10~45 ℃(-14~113℉). Placing in cold, hot or highly humid place will reduce the battery life.
- When long time storage, please charge it before using.
- Headphones resistance to sweat, but not waterproof, please don't put the headphones into water. If there is water on it, please use soft cloth to wipe.
- Use soft dry cloth to clean headphones.
- Do not use any sharp objects in connect with headphones.
- Do not put headphones at a higher or lower temperature.
- Do not charge the headphones in the moist environment.

Product Warranty

Product Name: KLINE
Product Model Number: KLINE
Purchase Date: _____
Invoice Number: _____
Customer Name: _____
Customer Phone: _____
Customer Address: _____

Warranty Terms

1. There is a manual and warranty card in the package. User fills out the warranty card as the warranty certificate.
2. When headphones quality problems occur in normal use and no more than a year since the date of purchase, users can enjoy free warranty services.
3. The following items do not belong to the scope of warranty:
A. Warranty card without dealer signature or seal
B. Damage caused by artificial factors or force majeure
C. Normal wear of the machine
4. Failure is caused by contrived damage, irresistible factors or in expired warranty period, the repair costs are needed to be paid by customers.
5. If the product is send back to factory for repair, please contact us, and fill the warranty cards with your name, address, telephone and fault phenomena.

Manufacturer: Shenzhen Kerris Interactive Entertainment Limited
Address: 4th 15 Building, Hualian Industry District, Huaning Road, Dalang Subdistrict, Longhua, Shenzhen, China (518109)
Phone: 0086-754-89822123
E-mail: sales@killerbodyrc.com
Website: hero.killerbody.com