


# INSTRUCTIONS

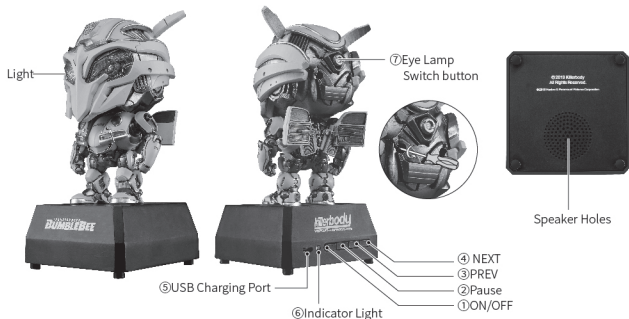

## Usage of Function Keys

### 1. Turn on/off Power:

- ① Press the ON/OFF key in the off state, and then the indicator light will be on which indicates the speaker and the Bluetooth mode are on.
- ② Press the ON/OFF key again to turn off the speaker.

### 2. Bluetooth Connection:

- ① Searching the Bluetooth device KBTFQ on mobile phone after the speaker is turned on. When "KBTFQ" is displayed in the list of the Bluetooth device, click it and the speaker will automatically match successfully after a few seconds.
- ② When the speaker is turned on again, it will automatically connect with the mobile phone that the speaker was last connected to if its Bluetooth is on.
- ③ Check whether the discovery device of the phone has been opened if the Bluetooth signal is not found. Disconnect the Bluetooth and turn off the speaker, and then turn it back on.

### 3. Playing Music:

- ① Press the Pause key to stop music that is playing and press again to resume.
- ② Press the PREV key to play the previous song.
- ③ Press the NEXT key to play the next song.

### 4. Charging:

- ① Battery Capacity: 200mah; Battery Voltage: DC3.7V; Charging Current: 275mA.
- ② An end of USB cable is connected to the USB charging port of the speaker, and the other end of USB is connected to the corresponding slot of the computer or the charger to charge the battery. It takes 90 minutes to complete charging. The remaining power is showed in the upper right corner after connecting to the phone.
- ③ It is advised to charge for one hour after using in the first time.
- ④ In the case of playing common songs without DJ, music playback time is about 70-80 minutes.

### 5. Eye Lamp Switch button

- ① Press the button to turn on the Eye Lamp of the Bumblebee (Mask). Press the button again to turn it off.
- ② The battery used to control the lamp is AG3 which is a non-rechargeable battery. Please purchase it separately if the battery is run down.
- ③ Replacing the battery:  
Use the screwdriver to unscrew the screws on the both sides of Eye Lamp Switch button, remove the old battery, and then reinstall a new one.